



Ensure you leave at least 100mm above radiator free of obstructions to airflow
 Wall to front face (83)

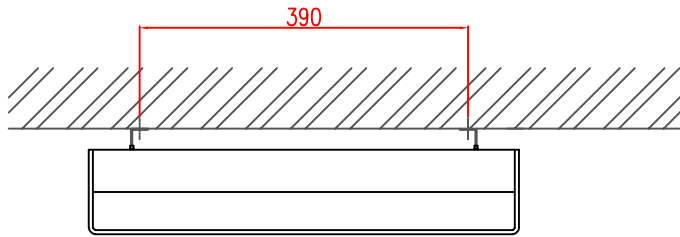

Depth (58)

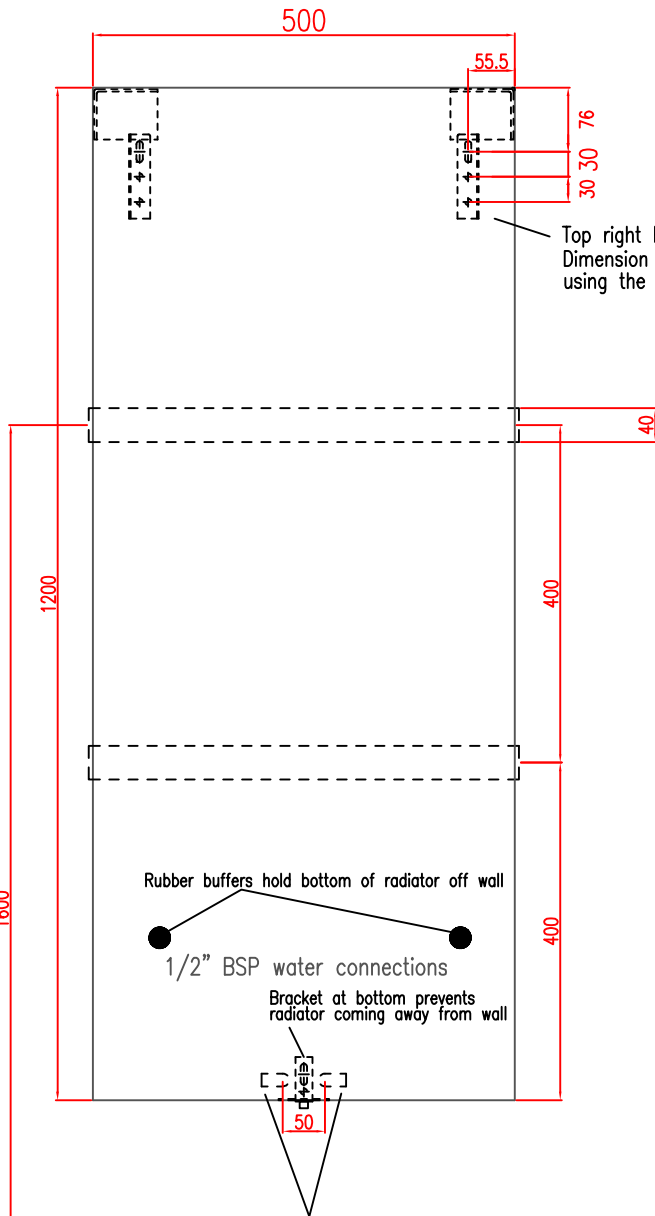

Top right hand bracket is always in this position
 Dimension the other brackets from this one using the fixing centre tables shown

Rubber buffers hold bottom of radiator off wall


1/2" BSP water connections

Bracket at bottom prevents radiator coming away from wall

2 x 15mm stub pipe (90° elbows) should protrude from wall as shown (flow & return)

Bracket fixing points (vertical) on wall

Supplied with radiator – 2 x braided hoses with 15mm compression fitting to mate with 15mm inlet and outlet pipe projecting from wall.

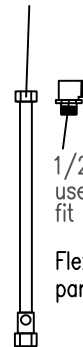

1/2" BSP to 1/2" BSPT elbow
 use male end to screw into radiator, then fit hose onto other end

Flexible hose can be coiled into back of panel once radiator has been hung

824

26 approx

15 min