


remove caps (b) and place towelclip (d) on to plates (a).
 position on wall using a spirit level to ensure the towelclip is level.
 remove towelclip and screw plates into the wall.
 put the caps (b) back over plates (a) then push towelclip onto the fixings.
 insert the grub screws (c) and tighten with an Allen key.
 use an electrician to wire the towelclip into the wall using a waterproof spur for wet environments such as bathrooms.

eskimo

- (a) plates
- (b) caps
- (c) grub screws
- (d) towelclip

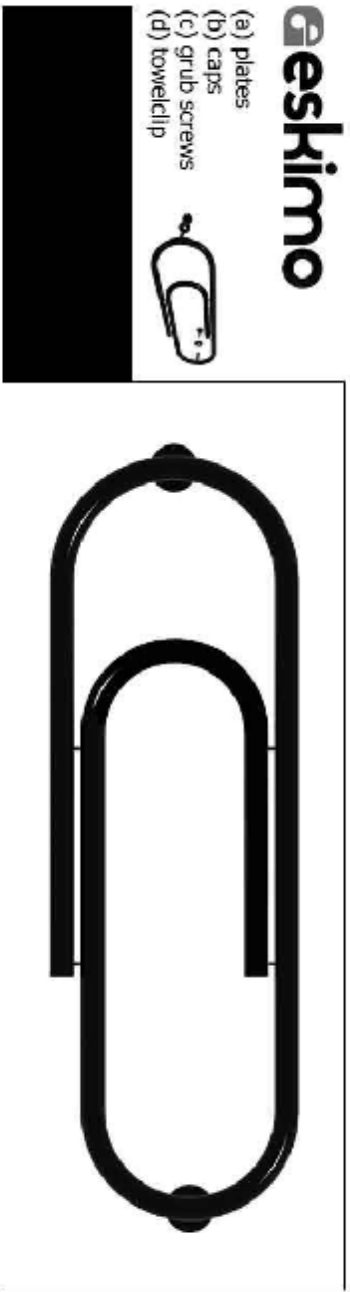

Towelclip